


MODEL: QDS-500/1M STAND

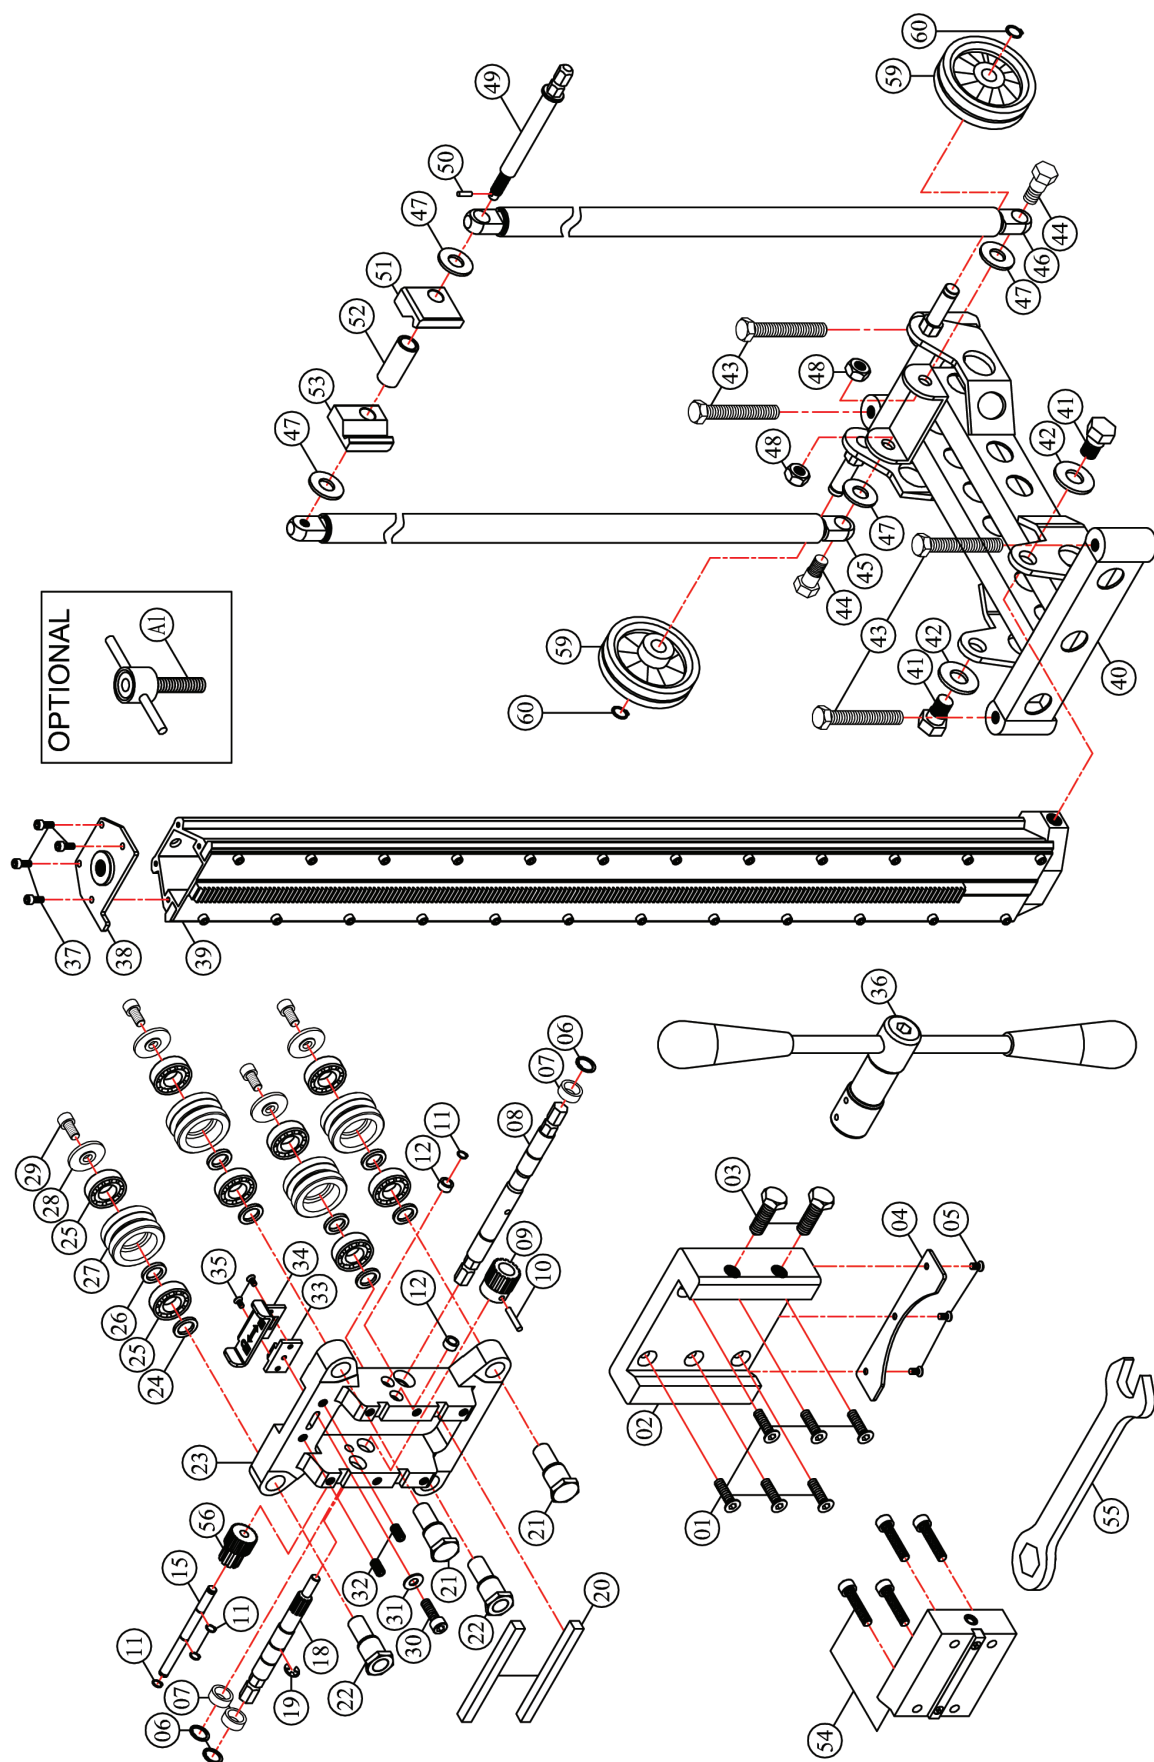

SPARE PARTS LIST FOR QDS-500/1M STAND

NO	DESCRIPTION	DETAILS	NO	DESCRIPTION	DETAILS
1.)	FLAT HEAD SCREW	M8 x 30	35.)	SCREW	M4 x 6
2.)	CRADLE		36.)	CRANK HANDLE	
3.)	N/A		37.)	SOCKET CAP SCREW	M5 x 10
4.)	CRADLE PLATE		38.)	COLUMN CAP	
5.)	FLAT HEAD SCREW	M5 x 12	39.)	COLUMN	
6.)	EXTERNAL CIRCLIP	IS-15	40.)	BASE	
7.)	BUSHING	Ø15 x Ø20 x 10	41.)	SHOULDER BOLT	M14 x P2.0
8.)	CRANK PINION		42.)	FLAT WASHER	5/8 x Ø30 x 3
9.)	CRANK GEAR	M1.5 x 16T	43.)	N/A	
10.)	ROLL PIN	Ø5 x 25	44.)	SHOULDER BOLT	M12 x P1.75
11.)	EXTERNAL CIRCLIP	S-8	45.)	BUTRESS BAR-LEFT	
12.)	BUSHING	Ø8 x Ø12 x 6	46.)	BUTRESS BAR-RIGHT	
13.)	N/A		47.)	FLAT WASHER	Ø14 x Ø32 x 2.5
14.)	N/A		48.)	NUT-NYLOCK	M12 x P1.75 x 19
15.)	INTERMEDIATE SHAFT		49.)	ANGLE LOCK	
16.)	N/A		50.)	ROLL PIN	Ø4 x 25
17.)	N/A		51.)	CLAMP CLAW-LEFT	
18.)	REDUCTION CRANK PINION	M1.0 x 11T	52.)	SPACER	Ø14.1 x Ø19.5 x 45.2
19.)	E CLIP	E-12	53.)	CLAMP CLAW-RIGHT	
20.)	MOUNTING TENON	10 x 10 x 115	54.)	MOUNTING SPACER	
21.)	ROLLER AXLE BOLT		55.)	WRENCH	M19
22.)	ECCENTRIC ROLLER AXLE BOLT		56.)	REDUCTION GEAR SET	
23.)	CARRIAGE		57.)	N/A	
24.)	AXLE SPACER C	Ø15 x Ø22 x 3.5	58.)	ROLLER AXLE	
25.)	BALL BEARING	6202-2RS NBN	59.)	WHEEL	
26.)	AXLE SPACER B	Ø15 x Ø22 x 3	60.)	EXTERNAL CIRCLIP	S-13
27.)	GUIDE ROLLER		61.)	SPACER	
28.)	AXLE SPACER A	Ø8.5 x Ø34 x 5	62.)	CRADLE LOCK BOLT	M12 x 70
29.)	SCREW	M8 x 16	63.)	SCREW	M4 x 8
30.)	SCREW	M5 x 20	64.)	COVER PLATE	
31.)	FLAT WASHER	Ø5 x Ø12 x 1	65.)	LEVELING SCREW	
32.)	DETENT UNIT	M8 x 16.75(17) x P1.25	66.)	NUT	M12 x P1.75
33.)	CARRIAGE LOCK	M1.5	67.)	FLAT WASHER	Ø1/2" x Ø23 x 2
34.)	CARRIAGE LOCK LEVER		A1)	JACK SCREW (OPTIONAL)	

